

Bare copper

## Flexible bare copper



### Description

These bare copper cables are indicated for executing earthing installations of electrical devices in both domestic and industrial installations.

### Applications

- Earthing installations

### Dimensions

Section (mm <sup>2</sup> )	Resistance at 20 °C (Ω/km)	External Diameter (mm)	Weight (Kg/Km)
16	1,21	5,00	127
25	0,780	6,25	198
35	0,554	7,30	277
50	0,386	8,80	398
70	0,272	10,50	565
95	0,206	11,95	750
120	0,161	13,60	962
150	0,129	15,25	1.200
185	0,106	17,00	1.462
240	0,0801	19,50	1.930

### Technical characteristics

#### 1. Conductor

Electrolytique flexible copper (Clase V) according to BS EN 60228:2005 (previously BS 6360) and UNE 60228.

#### ZARAGOZA HEADQUARTERS

Crta. Castellón Km 226,9  
50720 La Cartuja Baja  
Zaragoza - España  
telephone +34 976 500120  
fax +34 976 500138  
e-mail [info@rct.es](mailto:info@rct.es)

#### BARCELONA WAREHOUSE

Cables RCT Depósito Barcelona  
C/ Maresme 87-91  
08019 Barcelona - España  
telephone +34 93 3079562  
fax +34 93 3073400  
e-mail [barna@rct.es](mailto:barna@rct.es)

#### SEVILLA WAREHOUSE

Cables RCT Depósito Sevilla  
Pol Ind Calonge C/ Bronce Nave 4  
41007 Sevilla - España  
telephone+34 954 354946  
fax +34 954 358491  
e-mail [sevilla@rct.es](mailto:sevilla@rct.es)

#### VALENCIA WAREHOUSE

Cables RCT Depósito Valencia  
Pol Ind Sedaví C/ Sequía de Calvera 5 A  
46910 Valencia - España  
telephone +34 96 3759070  
fax +34 96 3759435  
e-mail [valencia@rct.es](mailto:valencia@rct.es)